



SPC Flooring Care & Maintenance Guide

Do's:

- Remove loose dirt with a soft bristle broom or vacuum cleaner with brush or felt head.
- Clean with a damp mop for everyday care.
- Wash the floor occasionally with a gentle (non-abrasive) floor cleaner – always follow cleaning product instructions and adhere to cautions before use. We recommend Cider Vinegar – one cup to four litres of warm water.
- Attend to spillages immediately.

Dont's:

- Do not use detergents, abrasive cleaners or "mop and shine" products. These may leave a dull film on your Flooring.
- When using a vacuum cleaner, disengage the beater bar or use the "bare floor" setting to avoid damaging your Flooring.
- High abrasive scrubbing tools are not recommended as they can damage your Flooring.
- Never use ammonia or bleach to clean your BiForm SPC Flooring.
- Due to the high temperatures, steam mops may cause damage and are not recommended.

Preventing Scuffs when Moving Furniture:

- Make sure furniture legs are smooth and won't mark your floors.
- Replace any small, narrow, metal, or dome-shaped glides with smooth protectors that are in flat contact with the floor.
- Place heavy-duty furniture casters or cups at the contact points of furniture or appliances you don't often move.
- Never push, pull, or drag furniture, appliances or other items across the floor. Always lift and carry.
- If you have to slide furniture or appliances, lay a plywood panel on your floor and "walk" the item across the panel.

Further Advice:

For further advice please contact us at:

- info@biform.co.nz
- 0800 449 274