

BIFORM FOREST BOARD

INSTALLATION INFORMATION

MEASUREMENTS

DECK BOARD

SOLID (mm)	PROFILE	FINISH
138 x 20 x 4850	FOREST BOARD- FACE FIXED	Solid - Smooth & Grooved

SPECIFICATIONS

Substructure	Timber
Board Coverage	143mm
Maximum Joist Spacings	400mm
Maximum Board Overhang	100mm
Minimum Ground Clearance	300mm
Minimum Ground Clearance Over Membrane	50mm
Minimum Gap between Each Board	5mm
Minimum Screw Distance From Board End/Edge	20mm
Screw Fixing	2 screws, every joist
Winged Composite Deck Screw 316 Stainless Steel	65mm
Perimeter and Breaker Boards	Surface Fix

- Lengths are 4850mm however up to 5mm variation can occur. Please dock to uniform length on site.
- For timber joists, we recommend uniform height and thickness SG8 joists.

It is the responsibility of the installer to comply with all local regulatory body rules.

SAFETY EQUIPMENT

Be safe. Always use appropriate safety equipment. We highly recommend using the following:

- Safety Glasses
- Safety Gloves
- Dust Mask
- Ear Muffs/Plugs
- Safety Shoes/Boots
- Long Sleeves

It is the responsibility of the purchaser, contractor, builder or installer to comply with normal safety practice standards in regards to any application or use of any Biform Decking products.

TOOLS LIST


Ensure that you have the correct tools before you start, this will make installing your Biform deck an enjoyable experience.

- Square
- Tape Measure
- Spirit Level
- Rubber Hammer/Mallet
- Cordless/Electric Drill
- Circular Saw/Drop Saw- the more teeth the better.
- #2 Square Drive Head Bit (Not supplied)
- Builders Pencil

STORAGE & HANDLING

- Boards should be transported flat (eg. not angled on the back of a ute).
- Carry the boards vertically, as shown below.
- Store the boards on a dry, level surface preferably sheltered area.
- Lay the boards flat (as per picture) and not at an angle.
- Keep the boards off the ground using gluts underneath.
- Gluts should be used to support decking every 500mm.
- Be careful when stacking boards- do not drop, dump or throw.
- Cover the boards until they are required for installation

STORAGE

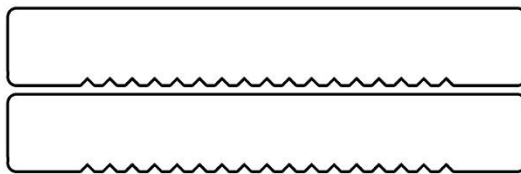


Store Boards Flat

HANDLING



Carry Boards Upright

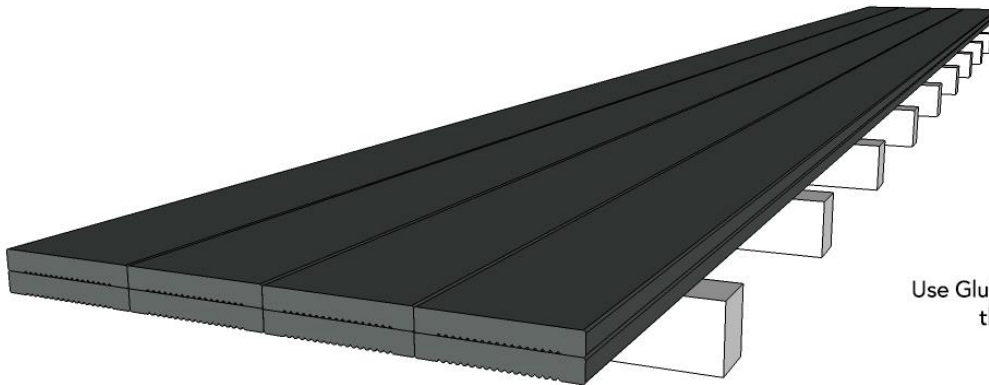

Use Gluts (Timber) to keep them off the ground

LAYOUT

FOREST BOARD is surface fixed meaning that the thermal movement is reduced significantly compared to the concealed fixings profiles. FOREST BOARD can be random butt-joined.

FACING BOARDS

The same decking boards can be used vertically as a facing board.

KEY INSTALLATION POINTS

A picture frame design is desirable, but not essential.

Random Butt Joins can be used.

Joists at 400mm centres.

AFTER INSTALLATION

CLEANING

It is important to clean your deck immediately after installation.

A scrub with warm water and sugar soap will help to speed up the weathering process of your Biform deck.

Hose down with a wash garden hose. Use a sponge mop or a broom with the end wrapped in a towel to remove excess water.

Do not allow water to sit on the deck

Do not use a water blaster.

CARE & MAINTENANCE

Please forward Care & Maintenance Guide and Warranty to the home owner/maintenance department.